


OPERATING INSTRUCTIONS FOR THE RS-1000

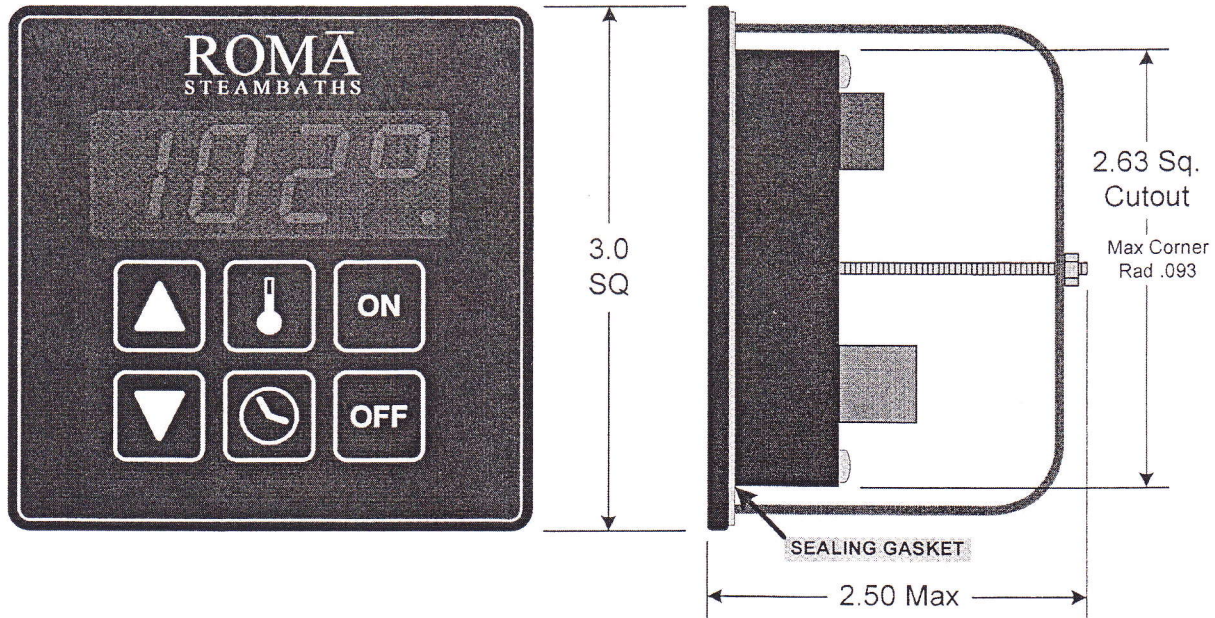

OPERATION:

- When power is applied the unit displays OFF.
- Press the thermometer button to display the set temperature (ie:102°), use the up and down buttons to change to desired value.
- Press the clock button to display the time in minutes & seconds (ie: 30:00), again use the up and down buttons to change it.
- Press the ON button to start the steam cycle, the unit displays the time left and the current temperature going back and forth once per second. (ie: 29:15 ... 98° ... 29:13 ... etc)
- Press the OFF button to stop the cycle, the unit displays OFF.
- The controller always remembers the last time and temperature values and when turned on resets to those values.